


# GREAT AMERICAN TENT CO

3086 DECATUR HIGHWAY, GARDENDALE, AL 35071  
PHONE: (205) 631-2221 — [contact@greatamericantent.com](mailto:contact@greatamericantent.com)

## 10' X 10' X 8' FRAME TENT DIAGRAM

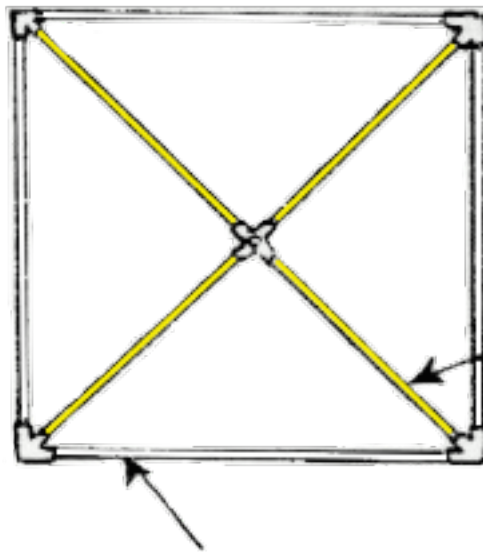

6'10" YELLOW

9'4" WHITE

### PARTS

- 1 — 4-WAY CROWN FITTING
- 4 — CORNER FITTINGS
- 4 — 7'8" BLACK PIPE (LEGS)
- 4 — 9'4" WHITE PIPE (SPREADERS)
- 4 — 6'10" YELLOW PIPE (HIP RAFTERS)

**ASSEMBLY INSTRUCTIONS**  
**10' X 10' X 8' FRAME TENT**

1. Lay out **4-WAY CROWN FITTING** and **CORNER FITTINGS** as outlined in the diagram. Lay out **9'4" WHITE PIPE (SPREADERS)** between corner fittings and to assure tent placement will be as desired. **DO NOT ASSEMBLE AT THIS TIME.**
2. Insert **6'10" YELLOW PIPE (HIP RAFTERS)** in **4-WAY CROWN FITTING** and insert nails. Insert opposite ends of hip rafters into **CORNER FITTINGS** and insert nails.
3. Insert four **9'4" WHITE PIPE (SPREADERS)** into **CORNER FITTINGS** to form the frame's perimeter, then insert nails.
4. Place canopy over frame and pull tight. Secure canopy to frame with buckle straps. Tighten corner buckles first.
5. Raise one side of canopy high enough to insert the **7'8" BLACK PIPE (LEGS)** into the **CORNER FITTINGS** and insert leg lock pins.
6. Raise opposite side of the canopy and install remaining legs and insert leg lock pins.
7. The canopy and frame can now be tied down. **ONLY** tie down at **CORNER FITTINGS**. Do not tie to pipe as it may bend.